

STUNT

The Planetarium

CHRONOGRAPH



IMPORTANT NOTICE

This booklet has all the important information for your STUNT watch. To keep it running smoothly and accurately, here are some tips:

- **Time Adjustments:** Try not to change the time between 8:00 PM and 4:00 AM. During this time, the movement gears are shifting.
- **Avoid Drops:** Keep it safe from drops, knocks, or heavy shaking.
- **Regular Maintenance:** Get it cleaned and serviced every 2 to 3 years (this isn't covered under warranty).
- **Temperature Changes:** Try not to expose it to extreme temperature changes.
- **Sports Activities:** It's best to avoid wearing it during sports like tennis, swimming, or basketball.

WARRANTY




STUNT watches have a limited warranty against manufacturing defects.

Please note that the warranty does not cover normal wear and tear, including damage to the lens, bracelet, or straps. If repairs have been performed by anyone other than STUNT, the warranty will be void. Additionally, water damage or any other damages resulting from misuse are not covered. We recommend handling your watch with care to ensure it remains in great condition.

WATER RESISTANCE

Water resistance in watches indicates their ability to withstand water exposure, measured in meters or atmospheres (ATM). A watch rated at 5 ATM is suitable for splashes and brief immersion, while a 10 ATM watch can handle swimming and snorkeling.

However, water resistance may decrease over time due to aging seals or impacts, so regular maintenance is essential to maintain this feature.

Depth				Up to 50M	Up to 100M	Up to 1000M
30 M	✓	✓	✓	×	×	×
50 M	✓	✓	✓	✓	×	×
100 M	✓	✓	✓	✓	✓	×
1000 M	✓	✓	✓	✓	✓	✓

IMPORTANT

In order to maintain water resistance, do not press any buttons or pull out the crown under water.


To clean the watch, use a soft, dry cloth to remove any dirt and moisture. Avoid using harsh chemicals or abrasive materials that could damage the surface.

CONTACT

Contact customer service for any enquiries you may have for use of your watch or repair requests.

Contact us at:
www.stuntprojects.com/give-us-a-ring

1. Hour hand
2. Minute hand
3. Seconds hand
4. Date
5. Chronograph Timer hands
6. Chronograph Timer (minute)
7. Chronograph Timer (hour)
8. Start/Stop pusher
9. Reset pusher
10. Crown position 1
11. Crown position 2
12. Crown position 3

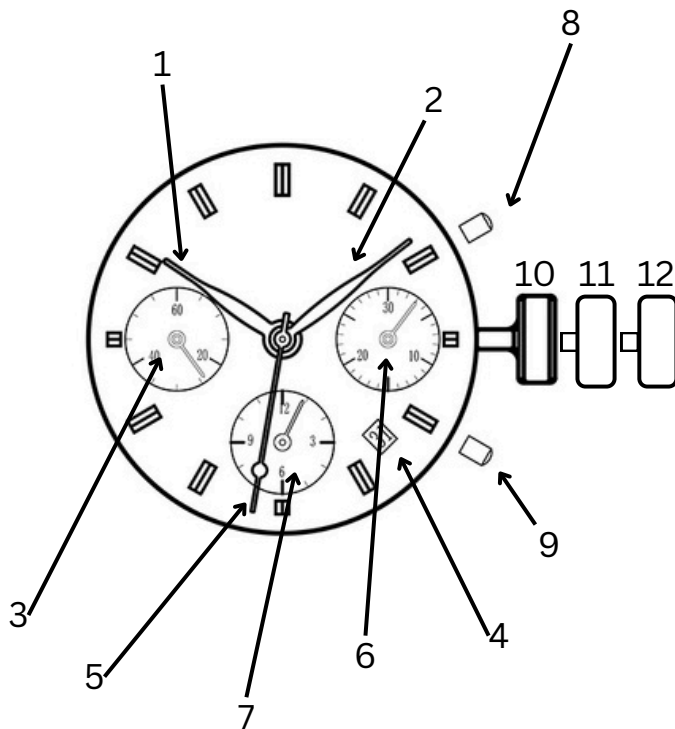

Position 1 (Neutral)


- For manual winding if the watch has not been worn for over 40 hours

Position 2 (Date setting)

- Pull out the crown 1 click to position 2 and turn the crown clockwise until the date indicated in **YELLOW** is correct.

Position 3 (Time setting)

- Pull out the crown 2 clicks to position 3 and turn the crown clockwise to turn the minute hand until the time indicated is correct.

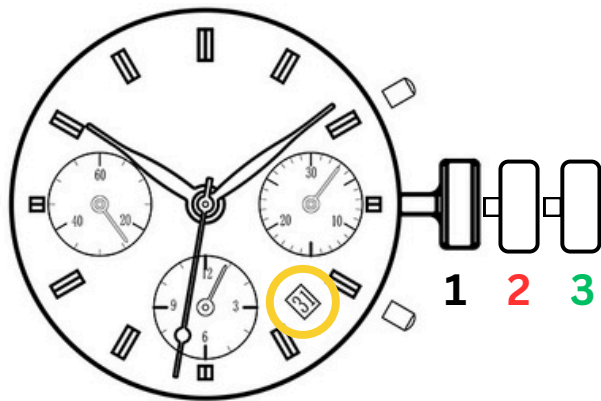

Chronograph:

- Ensure the **seconds timer hand** is at 12H neutral position by pressing the **RESET** pusher
- To start the timer, click on the **START/STOP** push once
- To stop the timer, click on the **START/STOP** push once

